

Wheelman Pro Installation Guide

Fit Kit: 810-0032-01

Fit the Following John Deere Vehicles

6230 Premium	6105R
6330 Premium	6115R
6430 Premium	6125R
6530 Premium	6130R
6534 Premium	6140R
6630 Premium	6150R
6830 Premium	6170R
6930 Premium	6190R
7130 Premium	
7230 Premium	
7330 Premium	
7430 Premium	
7530 Premium	

How to Use This Guide

This installation guide lists all the parts and provides instructions on how to install Wheelman Pro on the above vehicles. Read this manual thoroughly before beginning the installation.

- 1** Read and understand all safety warnings - page 2
- 2** Review the list of tools/items you may need to install Wheelman Pro - page 2
- 3** Review how your Wheelman Pro parts fit together - starting on page 3
- 4** Install Wheelman Pro - starting on page 6

1 Safety Information

As the operator of the vehicle, you are responsible for its safe operation. The autosteering system is not designed to replace the vehicle's operator. After installation, ensure all screws, bolts, nuts, and cable connections are tight and all cables have been secured to prevent them from being damaged.

The warnings starting below and those throughout this manual (indicated by either graphic at right) provide information to identify hazards associated with potential injury or death and tell you how to avoid them.



Read and understand this manual and all the warnings below before installing, operating, or performing maintenance or service. **FAILURE TO DO SO MAY CAUSE IRREVERSIBLE DAMAGE TO YOUR SYSTEM.** Keep this manual and all related safety information with the manuals for your vehicle. For questions or further assistance, contact Customer Support.

Safety Information and Warnings



To understand the potential hazards associated with the operation of an autosteer equipped vehicle, read the provided documentation before installing or operating the autosteering system.



To prevent accidental death or injury from being run over by the vehicle or automated motion of the steering system, never leave the vehicle's operator seat with autosteering engaged.



To prevent accidental death or injury from being run over by the vehicle, verify that area around the vehicle is clear of people and obstacles before startup, calibration, tuning, or use of autosteering.



To prevent the accidental engagement of autosteering and loss of vehicle control while driving on roads, shut down autosteering. Never drive on roads or in public areas with autosteering powered up.



To prevent accidental falls, maintain a stable position on the vehicle's platform or stairs when installing or removing the GPS antenna. If the vehicle does not provide a safe platform, use a ladder to safely access the vehicle's roof.



To avoid electrical shock hazards, remove the GPS antenna and/or other antennas from the vehicle before driving under low structures or low electrical power lines.

2 Tools/Items Needed for Installation



Make sure you have the right tools, such as:

- Wrenches, socket set, and screwdrivers
- Hex keys (4 mm and 5 mm)
- Hammer or steering wheel puller
- Torque wrench
- Tape measure (for vehicle measurements)

3 Parts for Your Installation


Use the diagrams that follow to:

- Below - verify you have all Wheelman Pro parts
- Page 4 - see an overview of cable connections
- Page 5 - see how the parts in the dotted rectangle below fit together on your steering column

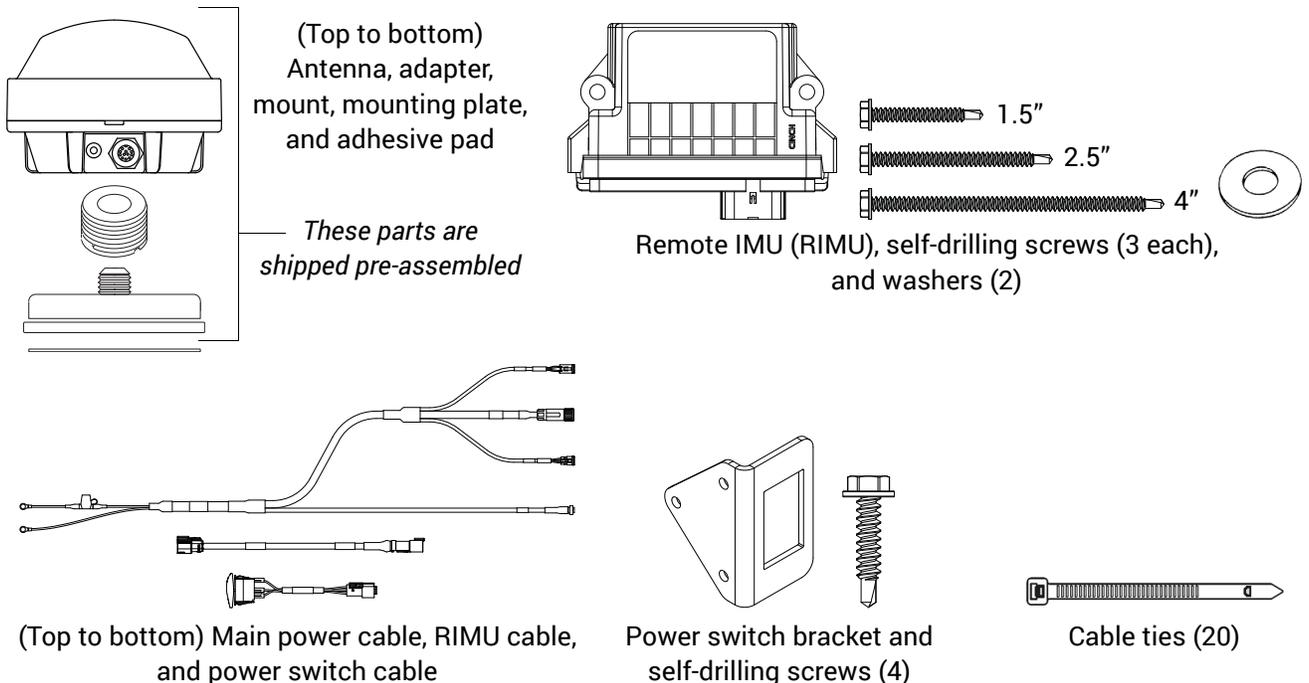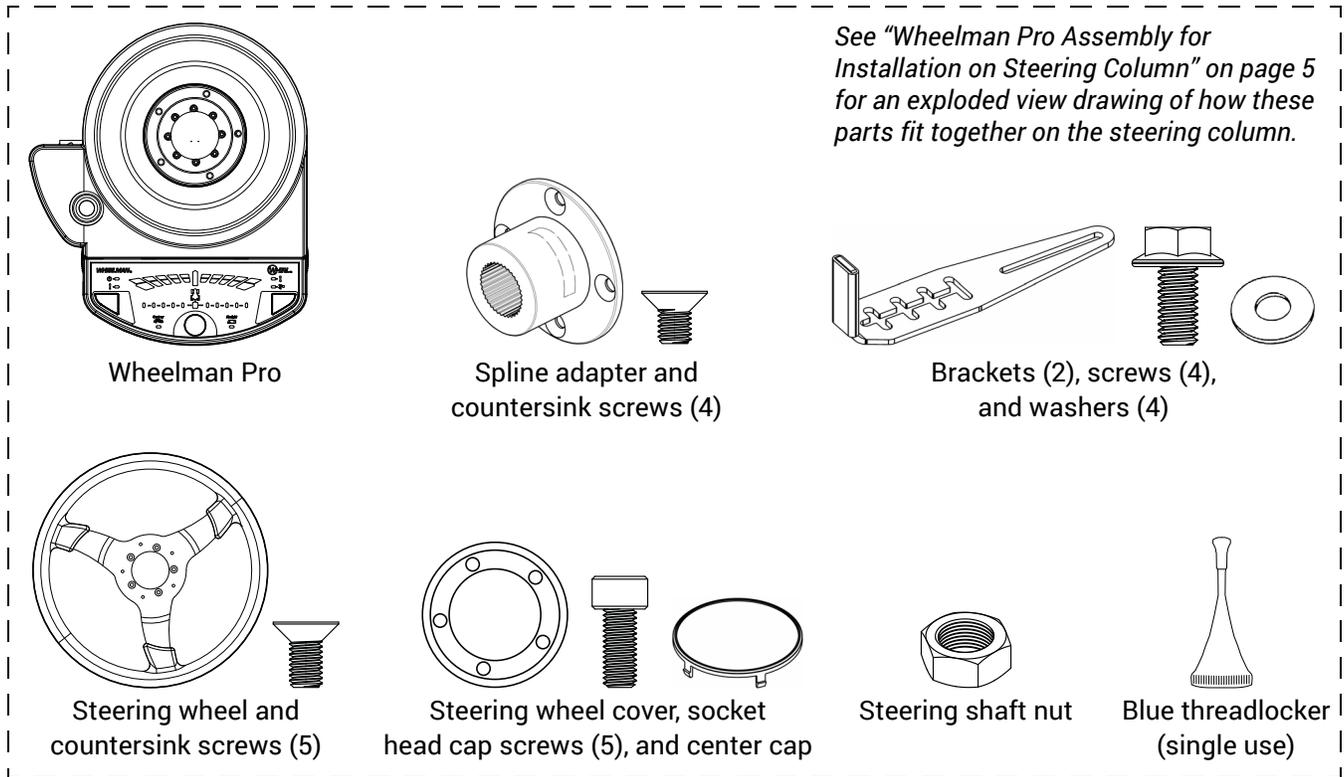



Wheelman Pro Connection Diagram

Review the diagram below to see how the Wheelman Pro parts are connected using the cables. The diagrams on the next page show how the Wheelman Pro is assembled on the steering column.

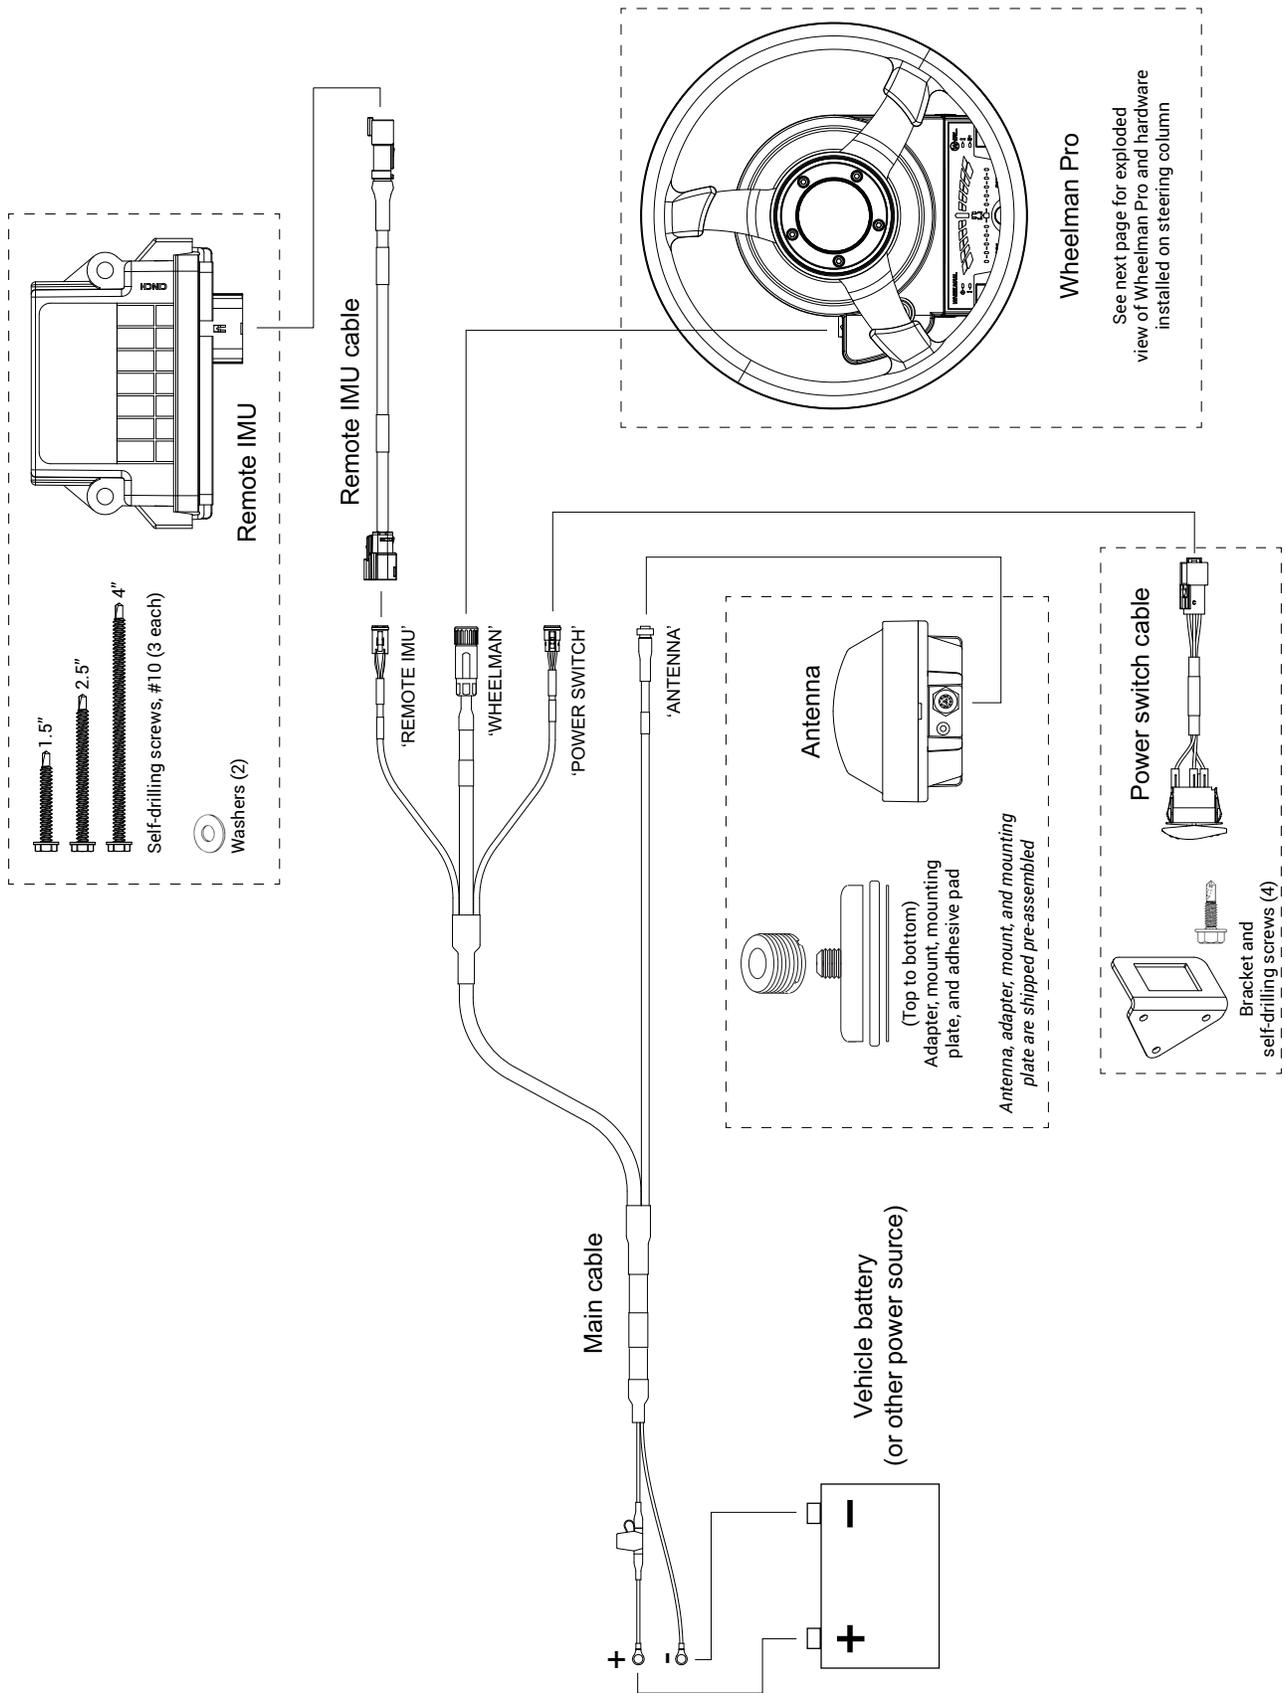

Wheelman Pro Assembly for Installation on Steering Column

Use the figures below to help you assemble Wheelman Pro as described in the instructions starting on the next page.

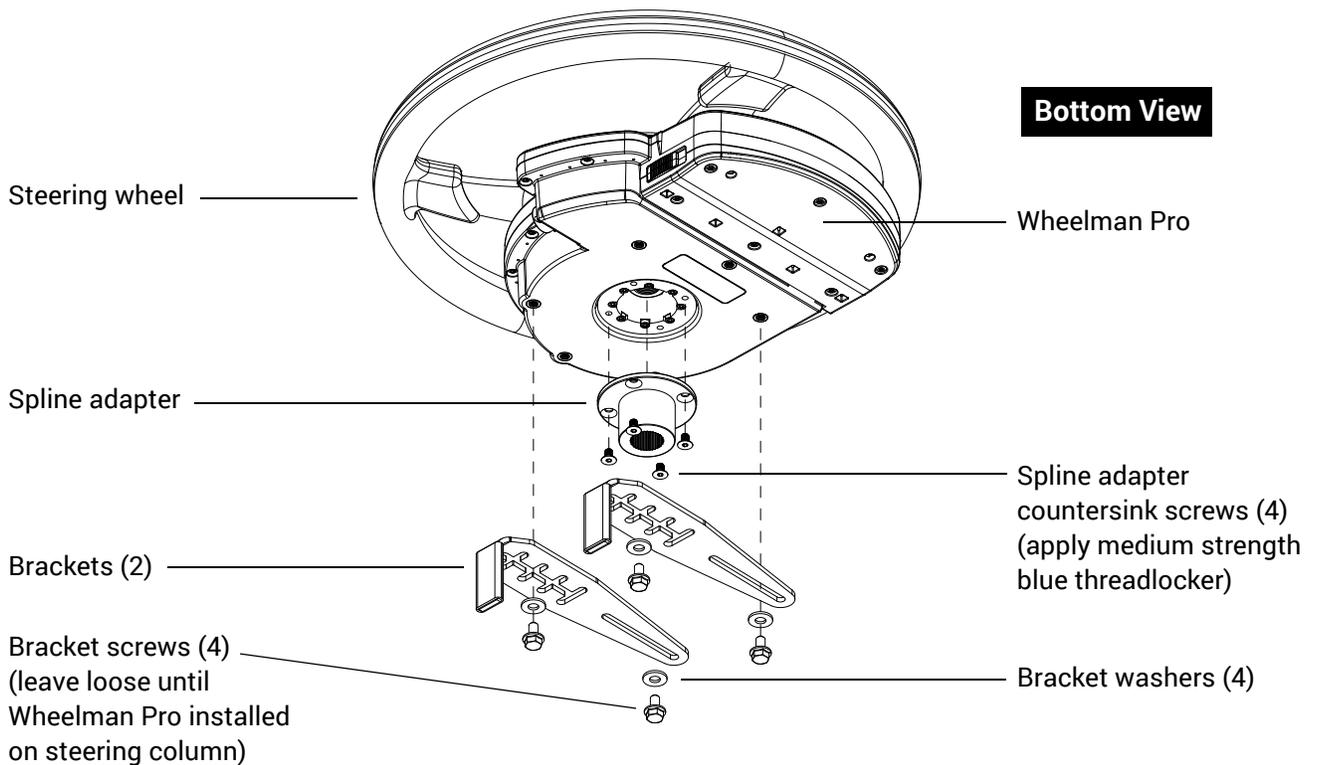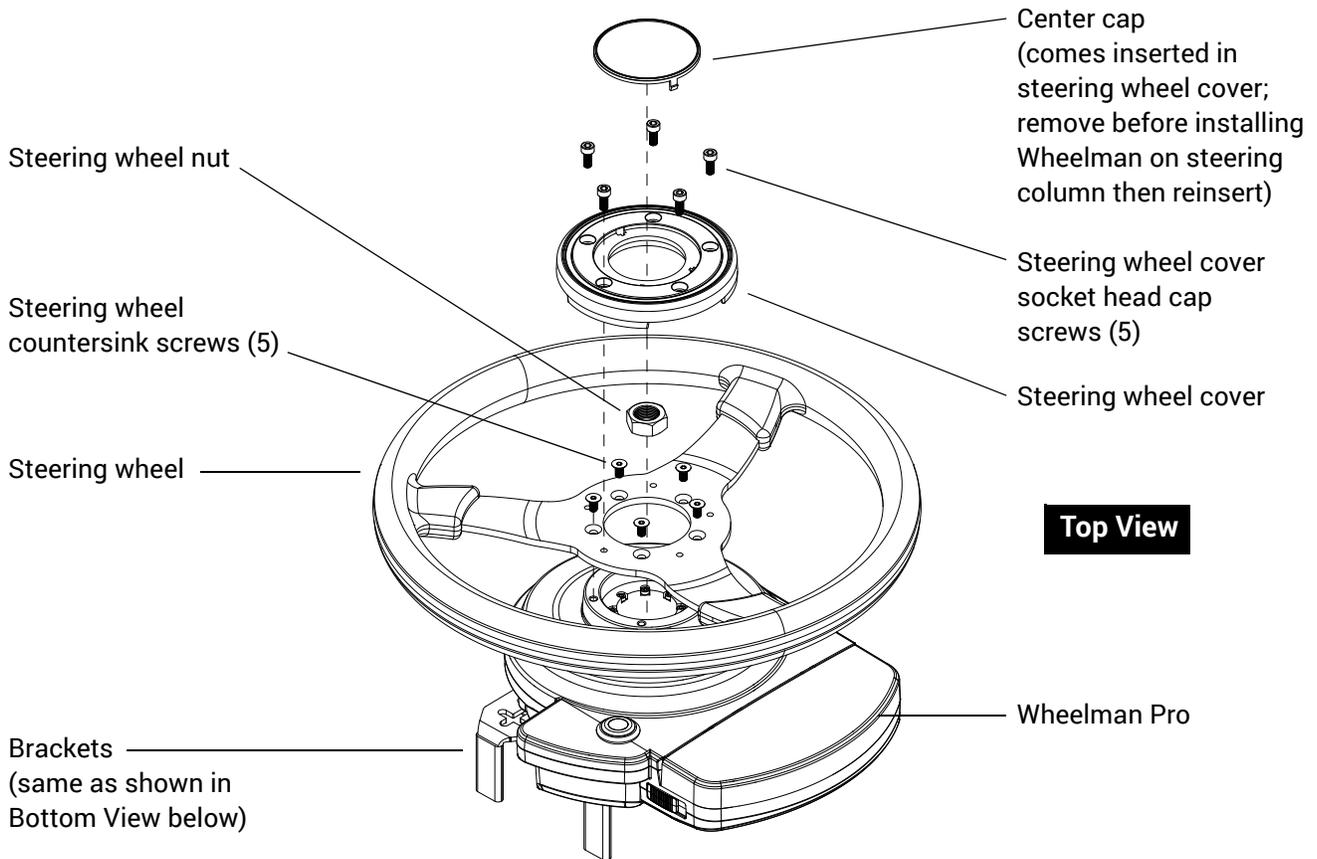

4 Install Wheelman Pro

Using the diagrams on the previous pages as a reference, complete this section to install Wheelman Pro on your vehicle.

NOTE: Before beginning the installation:

- On a clean surface lay out all the components and check them against the diagram on the previous pages.
- Become familiar with the components and where they are to be installed.
- Work out how the harness is to be routed into/out of the cab (typically, through the rear window for closed cabs) to the battery and antenna. It is recommended to start at the battery and work back into the cab.

a Assemble the components that you will install on the steering column


You may want to perform these steps on a flat surface, such as a work bench. These steps show installing the following on the Wheelman Pro: spline adapter, then brackets, and finally the wheel; however, you may install them in any order. You can then install this assembly as one piece on the steering column in section c on page 8.

Using the parts overview on page 3, the assembly diagram on page 5, and the photos that follow as reference, assemble the components while noting the following:


- Leave the brackets loose—you will tighten these later.
- Do not install the steering wheel center cap yet—you will install this later.

NOTE: The orientation of the brackets may vary for different vehicles. Review “When connecting the main cable to the antenna, note the nub on the antenna’s connector and the notch on the cable end (see near right). To connect the cable, align the notch with the nub, push the cable onto the antenna connector, then twist to the right to lock it in place (see far right).” starting on page 11 before installing the brackets on the Wheelman.

1. On the underside of the Wheelman Pro, install the spline adapter and the brackets:
 - a. Apply blue threadlocker to the four spline adapter countersink screws, then using the screws and the hex key, install the spline adapter on the bottom of Wheelman Pro. Torque screws to 6 N·m (53 in-lb).
 - b. Using the four bracket screws and four bracket washers, attach the two brackets as shown at right; leave the screws loose (do not tighten).

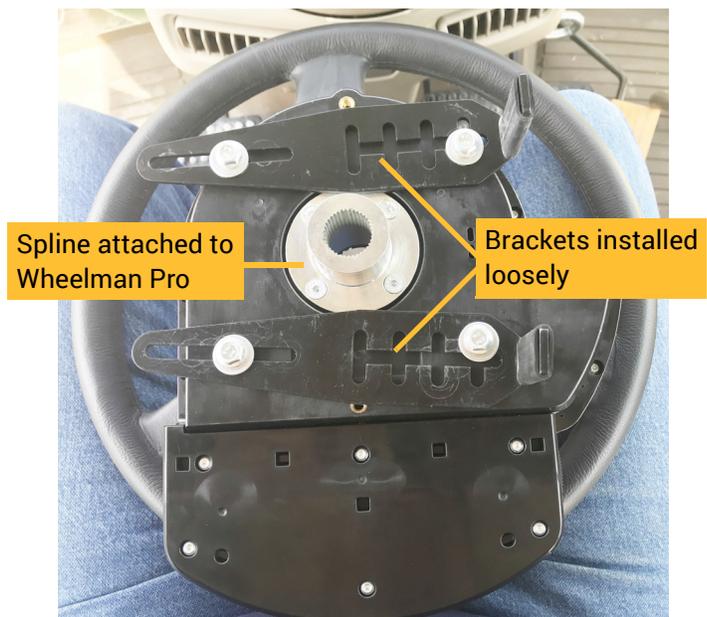

2. On the top side of the Wheelman Pro, install the new steering wheel (below left) and the steering wheel cover (below right)—although the photos below show the Wheelman already placed on the steering column, you may assemble these components on a flat surface, such as a workbench, before installing the assembly on the steering column (photo below right shows the cap installed, but you will install this later). If you want to assemble these components while installing Wheelman on the steering column, complete step b below (removing the existing steering wheel) first.
 - a. Place the new steering wheel on top of the Wheelman Pro, then using the five countersink screws that came with the steering wheel, fasten the wheel to the Wheelman Pro.
 - b. Carefully pop the Wheelman center cap out of the steering wheel cover—retain the cap, you will reinsert it later. Using the five socket head cap screws, install the steering wheel cover. Do not overtighten.

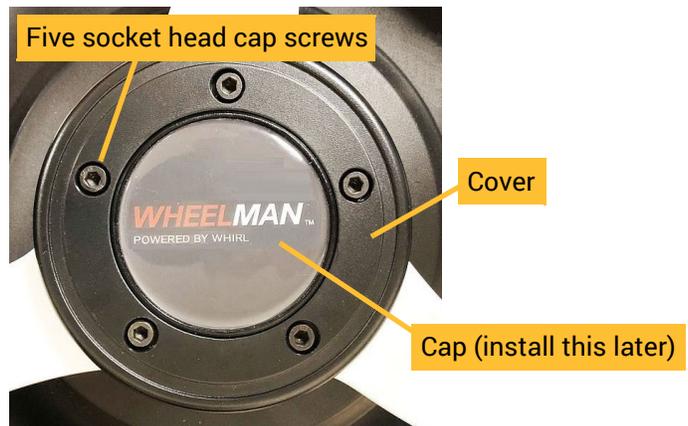

b Remove your existing steering wheel

1. Remove the steering wheel center cap (at right, before and after) and discard.
2. Remove and discard the steering wheel nut (below left).
3. Using a steering wheel puller, rubber mallet, or suitable tool, remove the steering wheel (removed, below right). If necessary, consult your equipment dealer if you are unsure of the correct procedure for removing the steering wheel.



C Install the Wheelman Pro assembly on the steering column


1. Place the Wheelman Pro assembly (from section a) on the steering column with the power button and connector to the left of the steering column.

The photo at right and some that follow show the Wheelman Pro without the wheel cover installed; however, you may have already installed the cover in section a.



NOTE: *When completing the next step, make sure the brackets are snug against the steering console and that there is proper clearance between Wheelman components and vehicle levers and switches for proper operation.*

2. Push the two bracket tabs against the steering column plastic then tighten the bracket screws with a 10 mm wrench.

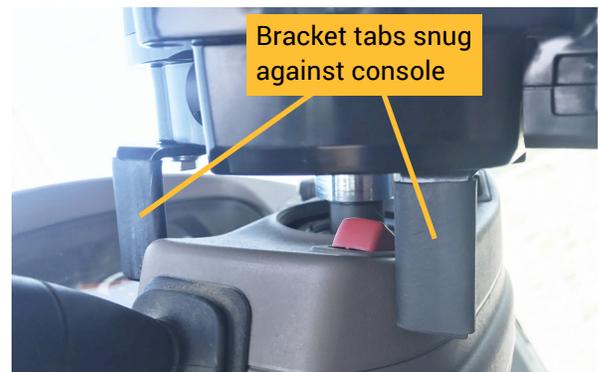

3. Using the new steering shaft nut, secure the Wheelman Pro to the steering column. Tighten the nut. **DO NOT OVERTIGHTEN.**



4. Using the two photos at right as a guide, insert the center cap into the steering wheel cover. The cap has three tabs on the back that snap into the three notches on the steering wheel cover.



d Install the Remote IMU (RIMU)

The Remote IMU (sometimes referred to as a gyro, but actually contains a set of gyros and accelerometers) measures your vehicle's movement in all directions to enable Wheelman to more precisely autosteer your vehicle.

⚠ WARNING: Before drilling (or using self-drilling screws) in the cab, make sure there is nothing that can be damaged by the drilling or by any self-drilling screws used to secure the RIMU. Secure anything that could be damaged away from where the screws come through. The photo at right is an example of a pre-drilling check; it shows an under-floor cabling compartment.




When installing the Remote IMU (RIMU):

- The mounting location must be solid to the vehicle frame or cab and be vibration-free.
- The RIMU must not move independently of the vehicle (not loose on the cab floor).
- The RIMU must be square to the floor and to the centerline of the vehicle.
- There must be sufficient clearance around the seat to accommodate the RIMU as the seat suspension moves up and down even with the seat at its lowest level (for example, with all the air removed).
- There must be sufficient clearance to rotate the seat without interfering with the RIMU.
- Do not mount the RIMU where it can:
 - Interfere with any of the vehicle's seat or other control levers and knobs.
 - Interfere with the operator's visibility while operating the vehicle.
 - Do not mount the RIMU where it can be damaged by falling objects or where other materials can be piled on it.

To install the Remote IMU:

1. Review the requirements above.
2. Using the two self tapping hex screws and washers, install the RIMU in your preferred location. Do not overtighten.


The photo at right shows the RIMU installed on the cab floor, to the right of the operator's seat, with the X-Y label pointing up, and with the connector pointing toward the rear. **You will enter the label and cable directions during vehicle setup in the Whirl app.**

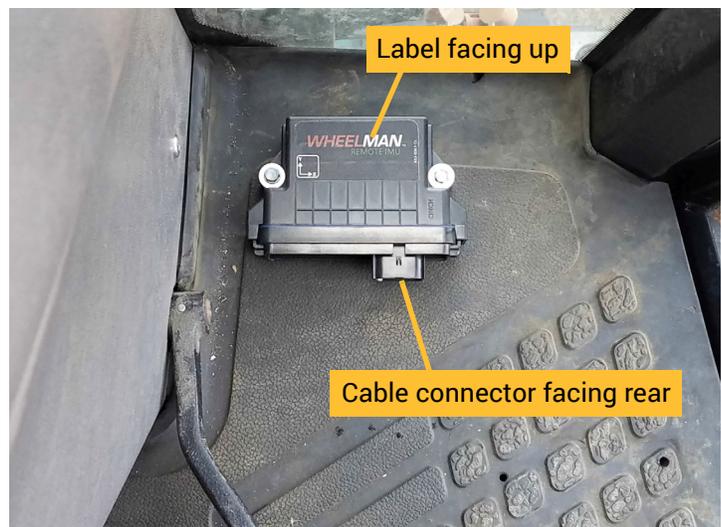

e Mount the antenna on the vehicle roof

The antenna, adapter, and mount (at right) are shipped pre-assembled.

Once you place the mounting plate on the vehicle roof, you will not be able to move it. Therefore, plan your antenna location carefully.

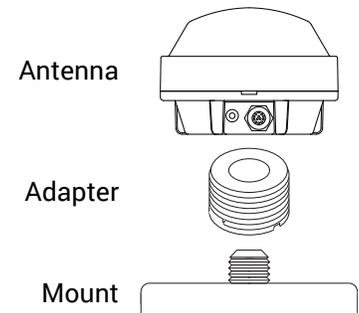

To mount the antenna on the vehicle roof:

1. Clean and dry the vehicle surface where you will attach the antenna mounting plate.
2. Remove the paper backing from the adhesive on the back of the mounting plate (see photo at right).




3. Position the mounting plate and press down hard for proper adhesion. When determining the location of the mounting plate, ensure that when you mount the antenna on the plate (next step) the antenna will be on the vehicle's centerline and pivot line.



Depending on your vehicle, if you cannot place the antenna on the centerline and/or pivot line, place the antenna as close as possible to these lines.

Measure the antenna left/right offset (distance left or right of centerline of antenna center) and the antenna pivot (distance front or rear of pivot line of antenna center). You will enter these values in the Whirl app during vehicle setup.

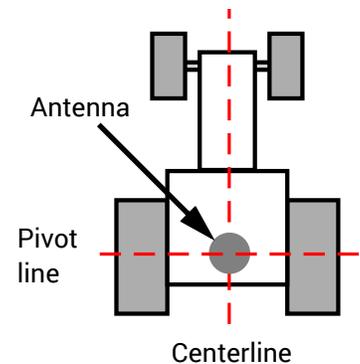

4. Ensure the antenna assembly (antenna, adapter, mount) is securely tightened, then place the assembly on the mounting plate (see photo at right).




f Route and connect the cables

Using the “Wheelman Pro Connection Diagram” on page 4 as a guide, connect the cables included in your kit (main cable, Remote IMU cable, power switch cable) to the appropriate parts.

When routing cables:

- Stow cabling under carpets and at the edges of the cab.
- Store excess cable lengths with a minimum six-inch bend radius.
- Avoid high-temperature exposure (for example the exhaust, exhaust manifold).
- Hand tighten cables only—do not use tools.
- When connecting the main cable to the antenna, note the nub on the antenna’s connector and the notch on the cable end (see near right). To connect the cable, align the notch with the nub, push the cable onto the antenna connector, then twist to the right to lock it in place (see far right).

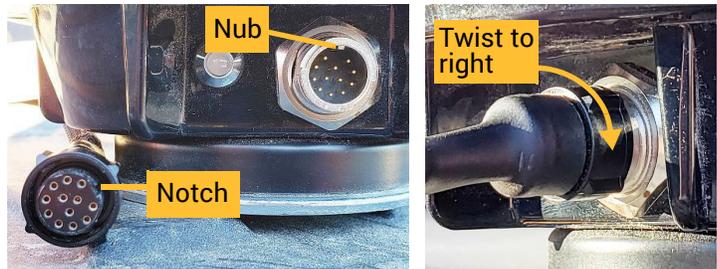

NOTE:

Some machines are equipped with pop out tabs that you can remove and replace with the power switch (left photo). If no tab is available, you can use the power switch bracket (right photo), mounting it in the cab in your preferred location. Turn the power switch off before connecting the main cable to the battery.



Congratulations on successfully installing your Wheelman Pro. Return to the Quick Start Guide to finish setup.